


To install the cabinet, gently remove all parts from the packaging. Place the base of the cabinet levelled. Then you can place the roof part of the cabinet, make sure all connection points are on the right spot, you might need to turn the roof part 180 degrees.

Use the hexagon key, which is enclosed in the envelop to insert the screw and with this to lock and unlock the the cabinet.

The glass sliding doors can also be locked by inserting the long hexagon screws in the left and right hole.

The glass and coated steel works can be cleaned with glass cleaner and paper tissues. Stains on the untreated oakwood base frame can be cleaned with only water and a sponge.

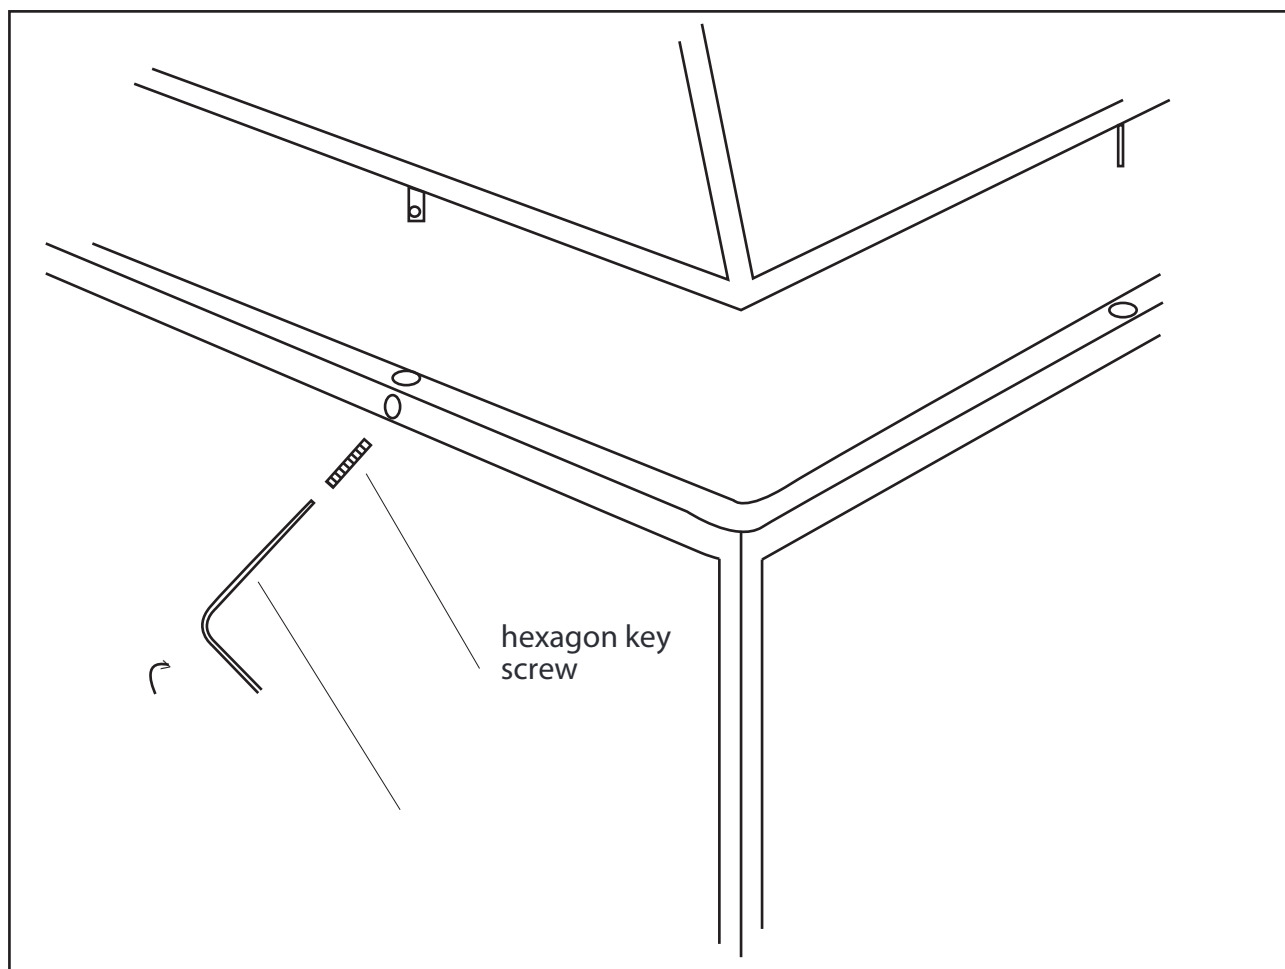

CONTACT

JSPR
T +31 (0) 497336939
F +31 (0) 847516979
INFO@STUDIOJSPR.NL
WWW.STUDIOJSPR.NL